INSTRUCTION MANUAL

Micro-Computer Fan

Model: SF-1466

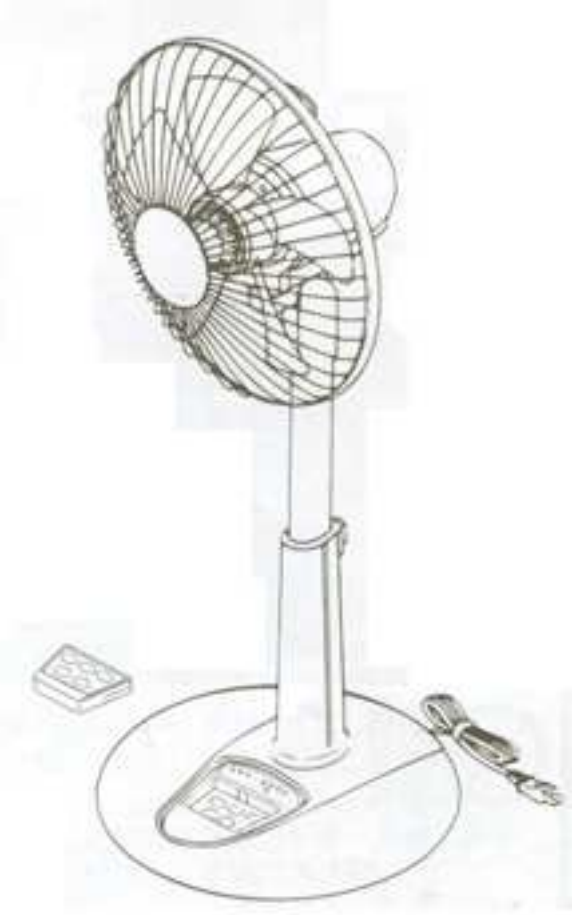

Thank you very much for your purchasing the SUNPENTOWN Stand Fan.
Please read the instructions carefully and keep for future reference.

IMPORTANT SAFETY INSTRUCIONS

Please read all instructions before using this product. Save these instructions for easy reference. When using electrical appliances, basic precautions should always be followed to reduce breakage, risk of fire, electric shock and injury to persons including the following:

- Do not use the fan outdoors.
- Never use the fan unless it is fully assembled.
- Do not use the fan under the following conditions: 1) High temperature of over 104F. 2) High humidity. 3) Steam filled room.
- Do not push finger or any object through the grilles and do not touch the fan blade during use. Be extra cautious when children and infants are around during use.
- Take care that curtains or other objects are not sucked into the fan during operation.
- Do not spray the fan with insecticide, which will damage the housing.
- WARNING: The fan has a polarized plug (one blade is wider than the other). To reduce risk of shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. Do not attempt to defeat this safety feature.
- WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- Unplug from wall outlet before servicing.
- To avoid fire or shock hazard, the Stand Fan should ONLY be plugged into a polarized 120 Volt AC outlet.

READ AND SAVE THESE INSTRUCTIONS

PARTS IDENTIFICATION

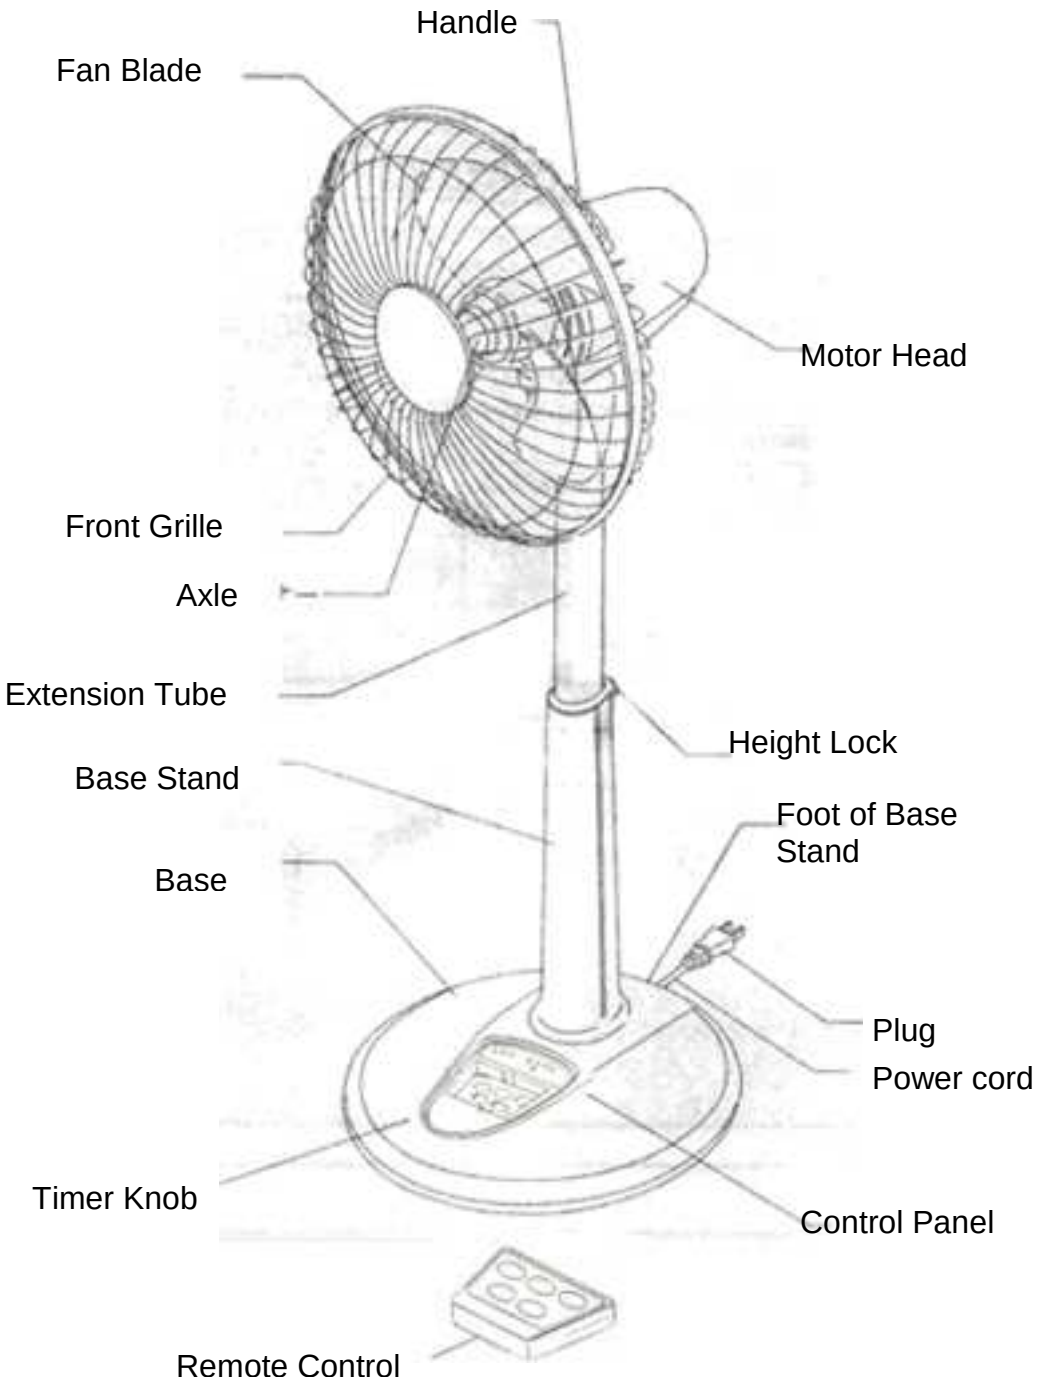

ASSEMBLY INSTRUCTION

A. Base Assembly

1. Place Base on flat and sturdy ground.
2. Turn the Foot of Base Stand over and remove the Lock Nut by turning counter-clock wise.
3. Insert Foot into base by ① aim the clip on the Foot to the groove on the base and ② press down firmly.

WARNING
During installation, take caution to not damage the insulation of power cord.

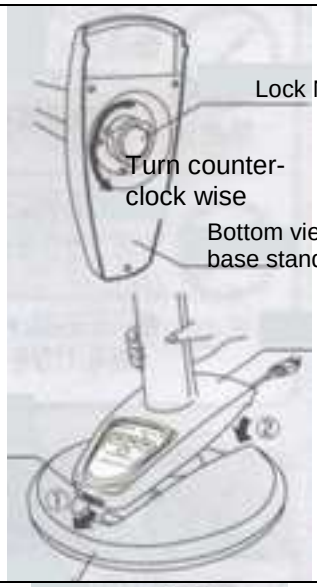

4. Replace Lock Nut and turn clock-wise until tightened.

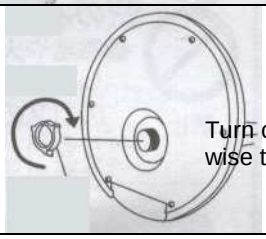

NOTE: To disassemble:
1. Remove Lock Nut by turning counter-clock wise.
2. Lift the rear of the Foot up and pull backwards.
3. Replace the Lock Nut back onto the Foot.

WARNING!

Do not stand immediately above the unit when adjusting height, may cause collision to body.

WARNING!

Do not plug in power source before the unit is fully assembled. May cause electric shock.

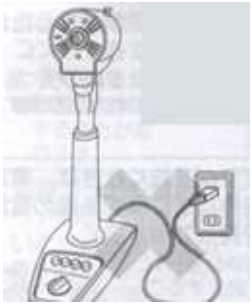

B. Blade Assembly

1. First, remove the following parts from the axle on the motor head. Please remove before installing grilles: Guard Lock Nut, Axle Sleeve and Lock Cap.	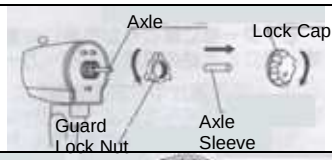
2. Place the Rear Grille on the axle. 3. Place the Guard Lock Nut and tighten by turning clock-wise.	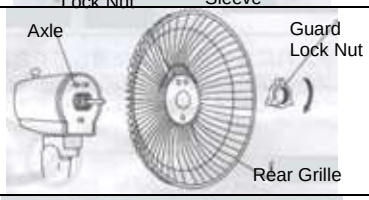
4. Place the Axle Sleeve on the Axle. (DO NOT USE) 5. Insert the Fan Blade on the Axle 6. Place the Lock Cap and tighten by turning COUNTER clock-wise.	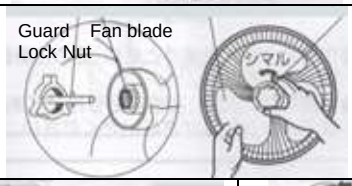
7. Install the Front Grille. • Align the clip on the top of the front grill and clip it to the rear grille. • Press down firmly at the six points as indicated. • Snap close the bottom clip	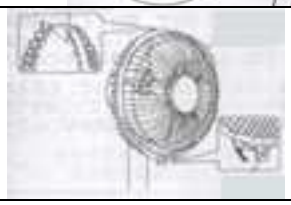 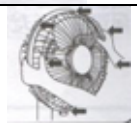

OPERATING INSTRUCTIONS

To Adjust the height of the stand: Press down on the Height Lock and adjust height. Release when desired height is reached.	
The base includes a section to store the power cord, when unit is not in use.	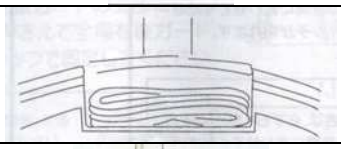
The base, by the control panel, includes a space to store the remote control.	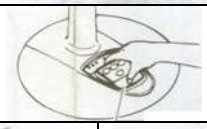
To place or replace batteries in the remote: remove back cover of remote by sliding outward. Insert 2 AA batteries as indicated.	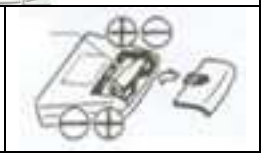

REMOTE AND CONTROL PANEL FUNCTIONS / INDICATIONS

<table>
<tr><th>REMOTE</th><th>CONTROL PANEL</th></tr>
<tr><td> 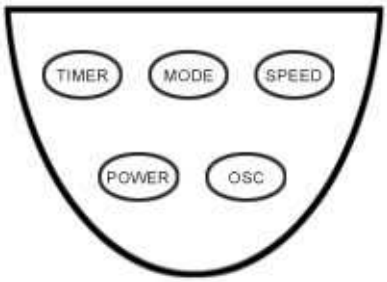
</td><td> 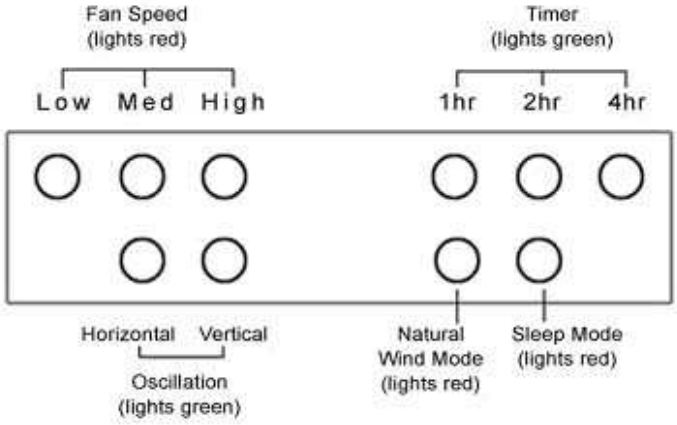
</td></tr>
<tr><td colspan="2">POWER button
• Press once to turn unit ON
• Press again to turn unit OFF</td></tr>
<tr><td colspan="2">FAN SPEED button
• Press to select fan speed in sequence: Low – Medium – High</td></tr>
<tr><td colspan="2">TIMER button (timer-off setting only,)
• Press to set in sequence:
0 (or continuous) → 1 hr → 2 hr → 4 hr</td></tr>
<tr><td colspan="2">OSCILLATION button
• Press once for Horizontal oscillation (left and right)
• Press again for Vertical oscillation (up and down)
• Press the third time for both Horizontal and Vertical oscillation, in ○○ shape. In this function, both Horizontal and Vertical indicator lights will be lit.</td></tr>
<tr><td colspan="2">MODE button
• Press once for Natural wind mode (please see below for details).
• Press again for Sleep mode (please see below for details).
• Press the third time to return to Normal mode.</td></tr>
</table>

NATURAL WIND mode
Unit mimics the pattern of natural wind outdoors. The rhythm varies depending on the fan speed when entered in Natural mode:

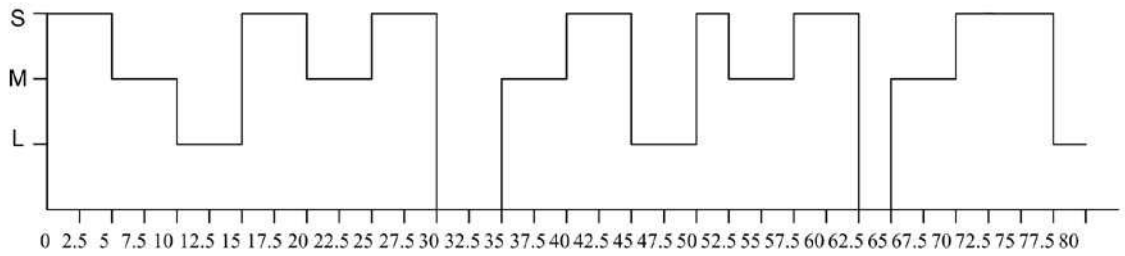

RHYTHM FOR HIGH FAN SPEED

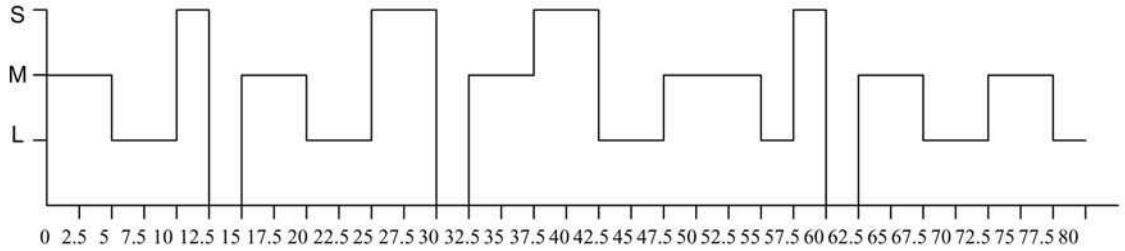

RHYTHM FOR MEDIUM FAN SPEED

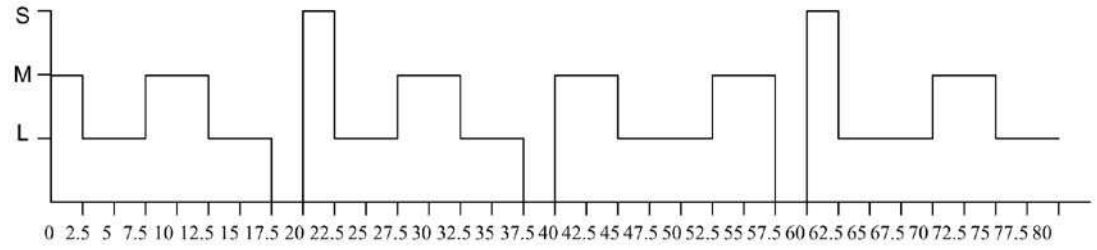

RHYTHM FOR LOW FAN SPEED

SLEEP mode

- If unit is set on High fan speed when entered in Sleep mode, unit will operate in High Rhythm for 0.5hrs, switch to Medium Rhythm for 0.5 hrs and then to Low Rhythm. Unit will continue operating in Low Rhythm until Timer is up or manually turned off / change modes.
- If unit is set on Medium fan speed when entered in Sleep mode, unit will operate in Medium Rhythm for 0.5 hrs, switch to Low Rhythm. Unit will continue operating in Low Rhythm until Timer is up or manually turned off / change modes.
- If unit is set on Low fan speed when entered in Sleep mode, unit will operate in Low Rhythm continuously until Timer is up or manually turned off / change modes.

Note: for pattern of High – Medium – Low Rhythm, please refer to patterns above.

MAINTENANCE

1. This product should be cleaned and checked on a regular basis.
2. Make sure the fan blade is clean at all times, to prevent color fading and damage.
3. For storage, clean and replace unit back in original packaging. Store in a cool, dry place.
4. To clean housing, wipe with clean damp cloth.
5. Never spray water directly onto the unit or immerse the unit/cord in water.
6. Do not use harsh chemicals such as acid, alcohol and the such on any part of the fan.

SPECIFICATION

Power Input: 120V / 60Hz
Power Consumption: High = 49W / Med = 40W / Low = 33W
R.P.M.: High = 1250 / Med = 1030 / Low = 850
Noise Level: 66 Db
Package Dimension: 16” x 10.7” x 4.25”

SPT®

Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown’s nominated representative.
- The warranty will be void if the product if modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int’l Inc.
21415 Baker Parkway, City of Industry, CA 91789-5236
Tel: 909-468-5288 · Fax: 909-468-5279
service@sunpentown.com
www.sunpentown.com